



C501	Plastic Tube, 1 oz. 078698350110
C501V	Carded Tube, 1 oz. 078698350127

ALUMINUM COOLING SYSTEM STOP LEAK

C501, C501V

Make sure cooling system is clean. Stops and prevents leaks and seepage in radiators, heater cores, blocks, cylinder heads, freeze plugs and gaskets. Will not clog or damage cooling systems. Works with all types of anti-freeze/coolant.

DIRECTIONS: With water in radiator at proper level and engine idling, gradually add contents to radiator. Run engine to circulate sealant until leak stops. Continue to run engine a few minutes after leak has stopped. Replace radiator cap. Allow the engine to continue to idle for 5 minutes and check again for leaks.

DANGER: USE EXTREME CAUTION WHEN REMOVING RADIATOR CAP TO AVOID BURNS THAT CAN BE CAUSED BY HIGH PRESSURE RELEASE OF HOT LIQUID OR STEAM. SEE VEHICLE OWNERS MANUAL FOR RADIATOR CAP REMOVAL INSTRUCTIONS.

NOTICE: While this information is presented in good faith and believed to be accurate, Blumenthal Brands Integrated, LLC does not guarantee satisfactory results from reliance thereon. The data is offered solely for your information and Blumenthal Brands Integrated, LLC disclaims all liability for any loss or damage from its use. Thoroughly test any application according to the product directions and independently conclude satisfactory performance. Nothing contained herein is to be construed as a recommendation to use the product in violation of any patent.